



Scan for full manual

## MA3-PS-4812 Quick Start Guide

This guide helps you install and use your MA3-PS-4812 for the first time.

Go to [www.kramerav.com/downloads/MA3-PS-4812](http://www.kramerav.com/downloads/MA3-PS-4812) to download the latest user manual and check if firmware upgrades are available.

### Step 1: Check what's in the box

- ✔ MA3-PS-4812 External Power Supply for PoE      ✔ 1 AC power cord      ✔ 1 DC power cord

### Introduction

MA3-PS-4812 is a power supply add-on that enables PoE powering of devices connected to **MTX3-34-M** modular matrix.




All normal static discharge precaution measures must be observed to prevent damage to the equipment.

### Step 2: Installing your MA3-PS-4812

To install MA3-PS-4812:

1. Power off **MTX3-34-M** and all devices connected to it.
2. Remove the new power supply from its shipping box and anti-static bag. Reserve the original packaging including the anti-static bag for future use.
3. Install **MA3-PS-4812** in the 19" rack, in the space above or below **MTX3-34-M**.
4. Connect the **MA3-PS-4812** round power connector (of the included DC power cord) to the port on the rear panel of **MTX3-34-M**.
5. Connect the AC power connector (of the included AC power cord) to the AC port and to the AC power source.
6. Power on **MTX3-34-M** and peripheral devices.

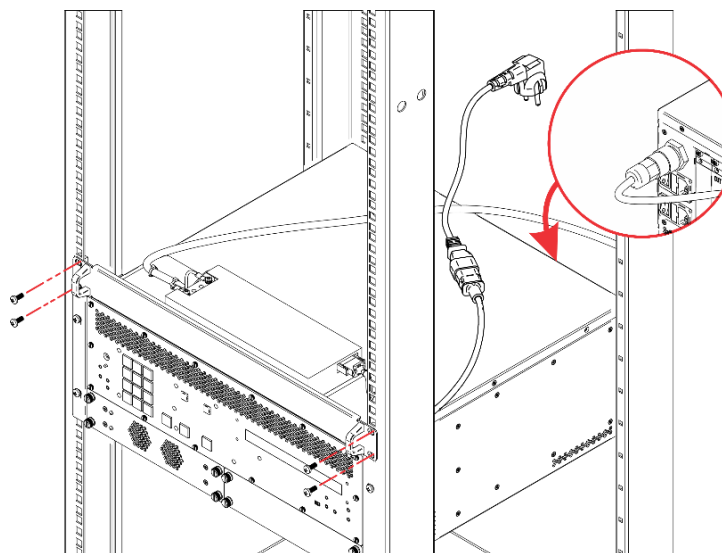

Safety Instructions (See [www.kramerav.com](http://www.kramerav.com) for updated safety information)

#### Caution:

- There are no operator serviceable parts inside the unit.
- Ensure that the environment (e.g., maximum ambient temperature & air flow) is compatible for the device.
- Avoid uneven mechanical loading.
- Appropriate consideration of equipment nameplate ratings should be used for avoiding overloading of the circuits.
- Reliable earthing of rack-mounted equipment should be maintained.

#### Warning:

- Use only the power cord that is supplied with the unit.
- Disconnect the power and unplug the unit from the wall before installing.
- Do not open the unit. High voltages can cause electrical shock! Servicing by qualified personnel only.
- To ensure continuous risk protection, replace fuses only according to the rating specified on the product label which located on the bottom of the unit.