 

 
The contour map:

 


 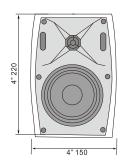




installation:


1.First, two mounting holes suitable for the $\phi6mm$ expansion rubber plug are punched on the wall, and the spacing between the holes is 144mm. Then, the $\phi6mm$ expansion rubber plug is punched.








 3. Connect the audio cable, then attach the product to the holder.



 4. Then adjust the Angle of the speaker.





VOLTAGE SPEAKER Instruction manual





The appearance is for reference only, please refer to the real object

Product Performance Standards: GB/T 12060.5-2011

Manufacturer: Guangzhou Ruifeng Digital Technology Co., Ltd. Address: No. 10, Shilou Section, Shilian Road, Shilou Town,

Panyu District, Guangzhou

Voltage Speaker


Series application:

Shopping malls, schools, conference rooms, hotels and restaurants

Product characteristics:

Extraordinary speech and music reproduction High strength HIPS material Lower maintenance costs Quick and easy installation Conformity with CE standards

Wiring diagram:

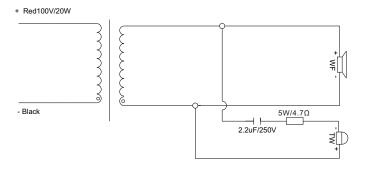

Technical parameters:

Frequency Response	90Hz ~ 20kHz
Sensitivity(1M/1W)	90dB
Rated power	20W(100V)
The loudest pressure level	103dB
Dimension	220*150*135mm
Unit Weight	2.15kg

Product curve chart:

