



Split HD Video Conference Terminal



User Guide English (V1.0)

Copyright and Disclaimer

All contents of this manual, whose copyright belongs to our corporation cannot be cloned, copied or translated without the permission of the company. Product specifications and information which were referred to in this document are for reference only. We may change, delete, or update any content at any time and without prior notice.

=====



Warning









This is class A production. Electromagnetic radiation at specific frequencies may affect the image quality of TV in home environment.

Catalogue

- 1 Packing List..... 1
- 2 About Product 2
 - 2.1 Product Appearance..... 2
 - 2.2 Product Specifications 4
- 3 Installation Connection..... 5
 - 3.1 Connection Cable..... 5
 - 3.2 Power On..... 6
- 4 Remote Control 8
- 5 GUI Main Interface 9
- 6 Basic Settings 10
 - 6.1 Network Setting..... 10
 - 6.2 H323 Account (optional)11
 - 6.3 SIP Account (optional) 13
 - 6.4 Display Name..... 14
 - 6.5 Language Setting 15
 - 6.6 Date Setting 16
 - 6.7 Reset Setting 17

1 Packing List

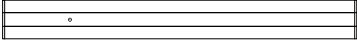When unpacking, please check and confirm all accessories that should be provided.

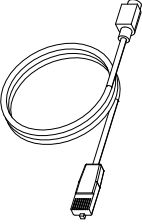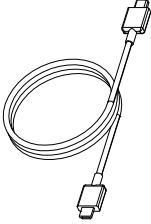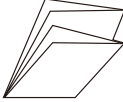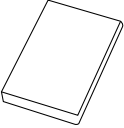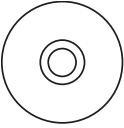
		
HD Video Conference Terminal x 1	Power Adapter x 1	Remote Control x 1
		
RJ45 to DIN 8 Control Line x 1	HDMI Cable x 2	Quick Start x 1
		
User Guide x 1	CD x 1	

2 About Product


The split HD video conference terminal adopts embedded system design and supports 1080P HD codec and H.323 and SIP communication protocols. The split design, easy to install, connect to the network, microphone, TV, plug in the power to communicate. The voice and image information are transmitted to each other to complete various conference functions such as document sharing. Save meeting time and funds, improve work efficiency, and create convenient face-to-face video conferencing interaction and all-round communication and communication.

2.1 Product Appearance

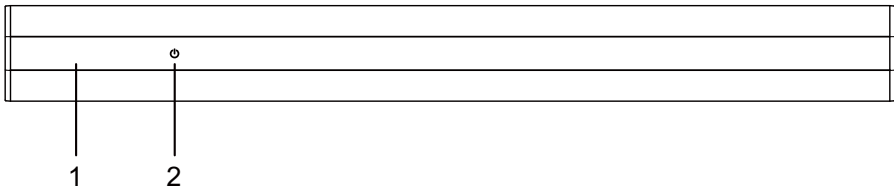

Appearance

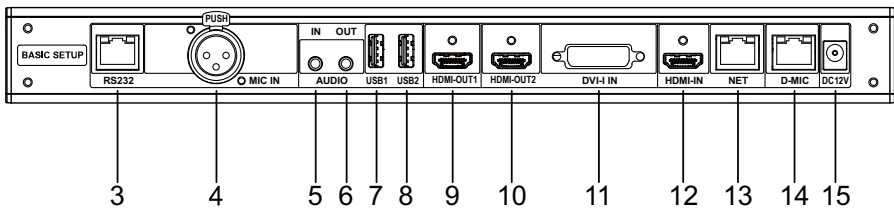

Interface



No.	Name	Function
1	Power Indicator	The indicator of the power.
2	Power Button	Touch to turn on or turn off the power.
3	RS232	RS232 interface, control the external camera through the VISCA command.

No.	Name	Function
4	MIC IN	Connect a microphone to the microphone audio input of the terminal for receiving voice.
5	AUDIO IN	3.5mm audio input interface for connecting audio input devices such as microphones and mixers.
6	AUDIO OUT	3.5mm audio output interface, connected to the speaker and terminal through 3.5mm audio cable to output sound.
7	USB1	USB interface 1, for USB devices such as an external USB flash drive, mouse, keyboard, microphone or speaker.
8	USB2	USB interface 2, for USB devices such as an external USB flash drive, mouse, keyboard, microphone or speaker.
9	HDMI OUT1	HDMI output interface 1, connected to the terminal and HDTV via HDMI cable.
10	HDMI OUT2	HDMI output interface 2, connected to the terminal and HDTV via HDMI cable.
11	DVI-I IN	DVI-I IN interface for connecting the second video input device (DVI video source, such as computer) to connect the computer or the second video source to the DVI-I IN input interface using a DVI cable. Press the "  button on the remote control and select "Open Dual Stream", then press "  button to confirm to send the second video to the conference terminal.
12	HDMI IN	HDMI input interface, connect the terminal and camera through HDMI cable.
13	NET	Network interface, connect the terminal to the network through the network cable.
14	D-MIC	Connect the digital microphone to the D-MIC audio input of the terminal for receiving voice.
15	Power Interface	Connect the power adaptor and turn on the device.

2.2 Product Specifications

Category	Item	Specifications
Electrical Feature	Operating Voltage	AC 100V ~ 240V, 50Hz ~ 60Hz
	Power Consumption	24W (Max.)
Environmental Requirements	Working Status	
	Temperature	0°C ~ 40°C
	Relative Humidity	10% ~ 80%
	Ambient Noise	< 46dBA SPL
	Non-working Status	
	Temperature	-40°C ~ 70°C
	Relative Humidity	0% ~ 95%
Physical Feature	Dimension	348mm x 146mm x 37mm
	Net Weight	1.4kg

3 Installation & Connection

The terminal can be installed in the cabinet or placed directly on the horizontal desktop.




Note

- If you place the terminal directly on the desktop, keep the desktop steady and pay attention to the anti-slip.
- If you place the terminal in a rack, use screws to secure it to the rack.
- Adjust the orientation of the terminal to avoid facing bright light sources (such as windows). It is recommended that the terminal be facing the participant.

3.1 Connection

The cable connections shown in the following figure contains optional configurations and for reference only. Please connect the cables according to actual needs.

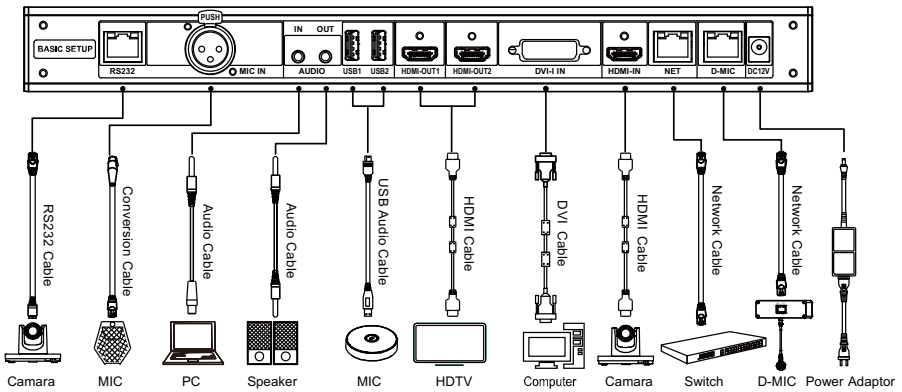

The connection configuration is as follows:

- Main video image input: Connect an external camera to the HDMI IN interface on the terminal.
- Second video image input: Connect the computer or the second video source to the DVI-I IN input of the terminal via a DVI cable.

- Sound input: Use the CANNON cable to connect the matching microphone to the MIC IN interface of the terminal.
- Player sound input: Use the 3.5mm audio cable to connect the computer or audio player to the AUDIO IN interface of the terminal.
- Sound output: Connect the HDMI OUT1 of the terminal to the HDMI input interface of the display device using the HDMI cable or connect the audio (speaker) to the AUDIO OUT interface of the terminal using the 3.5mm audio cable.
- Main video image output: Connect the HDMI OUT1 interface of the terminal to the HDMI input interface of the display device using the HDMI cable.
- Second video image output: Connect the HDMI OUT2 interface of the terminal to the HDMI input interface of the display device using the HDMI cable.
- Camera control: Connect the RS232 interface of the terminal with the RS232 cable and control the camera with the VISCA command.
- Connect to the network: Connect the NET interface of the terminal with a network cable to connect the terminal to the network.
- Connect the digital microphone: Connect the digital microphone to the D-MIC audio input of the terminal with a network cable.
- Connect the power: Connect the terminal to the power outlet with the supplied power adaptor.

3.2 Power On

Please make sure that all the devices used with the conference terminal have been connected before turning on the power.



- When the terminal power is on, please prevent the power cord disconnecting from the terminal and causing the terminal to lose power.
- Please turn off the terminal first, then turn off the external power supply, and finally pull out the power cord. Please check that the power cord is properly and reliably connected to the device as described below.
- Please make sure that the AC voltage is 100V to 240V and the frequency is 50Hz or 60Hz.


- The sequence definition and the corresponding voltage difference of live wire (L), neutral wire (N) and protective earth wire (PE) must comply with international standards, and the protective earth wire must be reliably grounded

Use HDMI OUT1 as the output interface, connect the cables as shown above and press the power button (green light is on) to start up to display the main menu.

After power is turned on, the indicators of the terminal are as shown in the following table.

Indicator	Description
Green Indicator	Normal operation
Orange Indicator	Powered off but not disconnected from power
Off	Power disconnected
Green Flashing Indicator	Received remote infrared signal

4 Remote Control

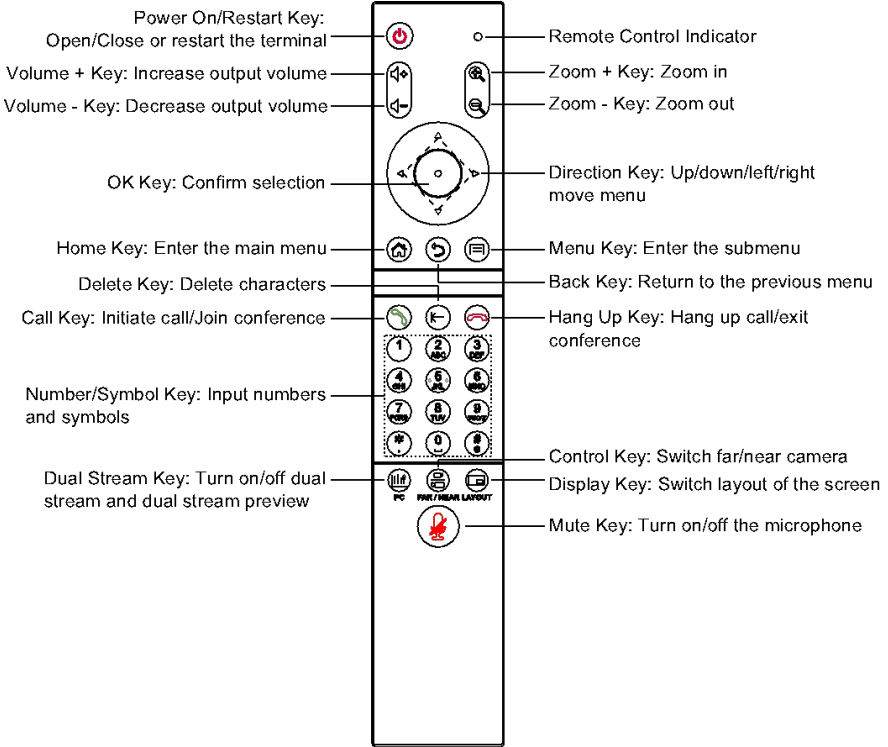


 Notice



The remote control may be affected by strong light, and the normal working distance is about ten meters.

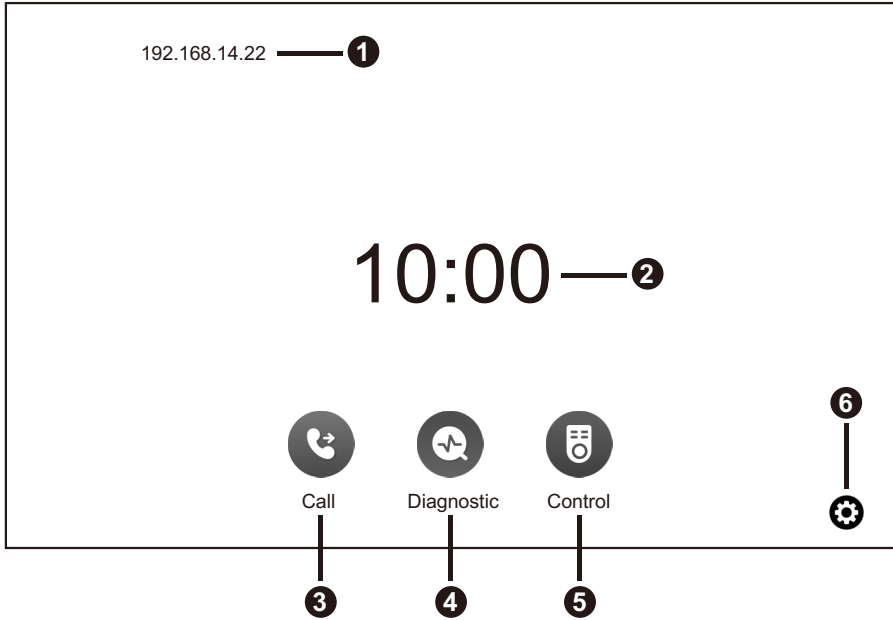

5 GUI Main Interface



Press the “” key of the remote control to enter the GUI main interface.





No.	Description	No.	Description	No.	Description
1	IP Address	2	Time	3	Call Menu
4	Diagnostic Menu	5	Control Menu	6	Settings Menu

Move the cursor to “” position and press “” key of remote control to confirm to enter the call menu;

Move the cursor to “” position and press “” key of remote control to confirm to enter the diagnostic menu;

Move the cursor to “” position and press “” key of remote control to confirm to enter the control menu;

Move the cursor to “” position and press “” key of remote control to confirm to enter the settings menu;

6 Basic Settings

6.1 Network Setting


Before using the Ethernet for video communication, you must pre-configure the Ethernet parameters of the terminal, like IP address, netmask, Default gateway and DNS address.


➤ Operation

Step 1 Enter the GUI main interface, select “Settings > Network > IP”.

Step 2 Configure the network parameters. The description of parameter is shown on below table.

Step 3 Select “Save” to save the configuration.

Step 4 Press the  button of remote control to go back to the GUI main interface.

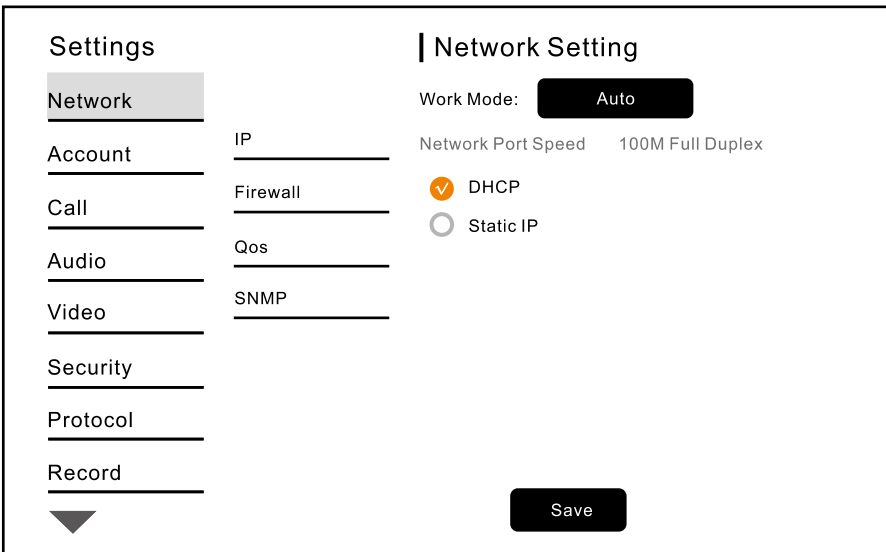

Parameter	Description
Work Mode	Configure the network working mode: <ul style="list-style-type: none"> ● Auto ● 10M Full Duplex ● 10M Half Duplex ● 100M Full Duplex ● 100M Half Duplex
Connection Type	<ul style="list-style-type: none"> ● DHCP: The terminal automatically obtains an IP address through a DHCP server. ● Static IP: The IP address of the terminal is assigned by the network administrator. You need to set the IP address, netmask, gateway, and DNS address. <ul style="list-style-type: none"> ➤ IP address: Configure the IP address of the terminal ➤ Netmask: Configure the subnet mask of the terminal ➤ Gateway: Configure the default gateway address of the terminal ➤ DNS address: Configure the IP address of the DNS server

6.2 H323 Account (optional)

Set the H323 ID and number of the terminal, specify the GK address so that the terminal can register with the GK and call conferences or other terminals using the number.

➤ Operation

Step 1 Enter the GUI main interface, select “Settings > Account > H323 Account”.

Step 2 Configure the H323 account parameter. The description of parameter is shown on below table.

Step 3 Select “Save” to save the configuration.

Step 4 Press the  button of remote control to go back to the GUI main interface.

Settings

- Network
- Account
- Call
- Audio
- Video
- Security
- Protocol
- Record

H323 Account

Enable H.323:

Register Mode: Manual

*GK Server: _____

*Site Name: _____

Site Number: _____

Username: _____

Site Password: _____

Save

Parameter	Description
Enable H.323	Enable or disable H.323 function.
Register Mode	Select the H.323 account register mode, you need to manually enter the information required for H.323 registration.
GK Server	Set the IP address or domain name of the GK server. When set to domain name, you need to enable the DNS server and set the correct mapping on the DNS server.
Site Name	The name or alias of the terminal registered on the GK. After the terminal registers with the GK server, the GK server identifies the terminal with the name.
Site Number	The corresponding site number of the terminal. After the terminal registers with the GK server, the remote terminals can use the number to call this terminal.
Username	Input the username used to register with H323 server.
Site Password	The password registered by the terminal to the GK server for the legality of the GK server authentication terminal.

6.3 SIP Account (optional)


Configure the SIP parameters, set the SIP address of the terminal, and communicate with the remote server through the registration number.


➤ **Operation**

Step 1 Enter the GUI main interface, select “Settings > Account > SIP Account”.

Step 2 Configure the SIP parameters. The description of parameter is shown on below table.

Step 3 Select “Save” to save the configuration.

Step 4 Press the  button of remote control to go back to the GUI main interface.

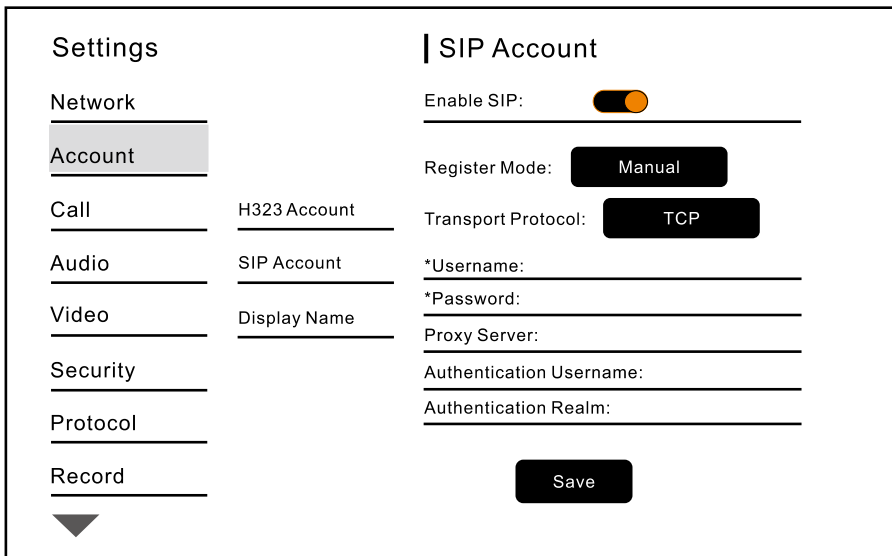

Parameter	Description
Enable SIP	Enable or disable SIP function.
Register Mode	Select the SIP account register mode, you need to manually enter the information required for SIP registration.
Transport Protocol	Select the required transport protocol: TCP, UDP, TLS and Auto.
Username	Enter the username used to register the SIP server.

Parameter	Description
Password	Enter the password of the SIP server to be used by the terminal to authenticate the terminal of the SIP server. When the SIP server is authenticated, the password set by the terminal must be the same as the password set in advance on the SIP server.
Proxy Server	Enter the IP address or domain name of the SIP proxy server. This must be enabled when the user's network environment requires that the proxy server be enabled.
Authentication Username	Enter the username used for authentication.
Authentication Realm	Enter the domain name used by the SIP server to identify the corresponding domain.



Note

After you enable the terminal to register the SIP server, you need to configure the “Proxy Server”, “Username” and “Authentication Realm”.

6.4 Display Name


Configure the terminal name and select the H.323 displays name encoding and decoding mode.


➤ Operation

Step 1 Enter the GUI main interface, select “Settings > Account > Display Name”.

Step 2 Configure the “Display Name” of the terminal.

Step 3 Select “Save” to save the configuration.

Step 4 Press the  button of remote control to go back to the GUI main interface.


Settings		 Display Name	
Network		Terminal Name:	<input type="text"/>
Account		Encode H.323 display name as:	<input type="button" value="Unicode"/>
Call	H323 Account	Decode H.323 display name as:	<input type="button" value="Auto"/>
Audio	SIP Account		
Video	Display Name		
Security			
Protocol			
Record			
		<input type="button" value="Save"/>	<input type="button" value="Default"/>

6.5 Language Setting

Step 1 Enter the GUI main interface, select "Settings > System > Language".

Step 2 Set the desired system language.

Step 3 Select "Save" to save the configuration.


Step 4 Press the  button of remote control to go back to the GUI main interface.


6.6 Date Setting

Step 1 Enter the GUI main interface, select “Settings > System > Date”.

Step 2 Configure the parameters such as date, time, and date format. The description of parameter is shown on below table.

Step 3 Select “Save” to save the configuration.

Step 4 Press the  button of remote control to go back to the GUI main interface.

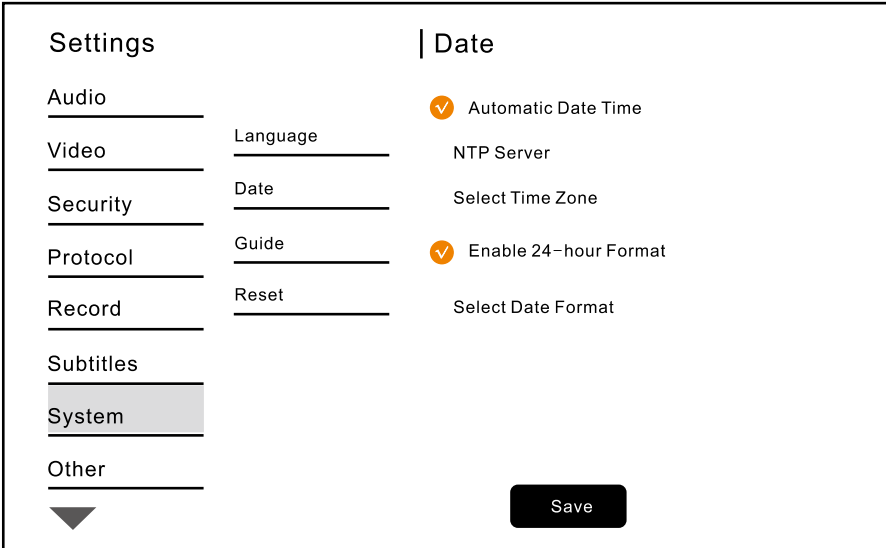

Parameter	Description
Automatic Date Time	Enable “Automatic Date Time” to indicate the time provided by the network.
Set Date	Set the date to take effect when disable “Automatic date time”.
Set Time	Set the time to take effect when disable “Automatic date time”.
NTP Server	Set the NTP time server.
Select Time Zone	Select the time zone of your region.
Enable 24-hour Format	Enable or disable the 24-hour format.
Select Date Format	Select the date format: day-month-year and year-month-day.

6.7 Reset Setting

Step 1 Enter the GUI main interface, select “Settings > System > Reset”.

Step 2 Select “Reset to factory settings”.

Step 3 Select “Save” to confirm and restart system.



After restoring the factory settings, all the terminal parameters you configured previously will be lost and restored to default settings.